



MVAdvanced_®

Portable Paperless Recorder

MV1000/MV2000

Introducing the portable recorder with evo lutionary high reliability and ease-of-use!

Measurement scenarios that call for speed and accuracy: MVAdvanced accurately captures precious evaluation data on the test bench and in the field, and helps to cut down on manhours.



Easy Setup

The simplified interface lets you start measuring sooner!

Reliable Recording

You can now record even more channels over even longer durations



Smart Analysis

Improved PC compatibility ensures a smooth transition into data analysis!



Incredibly clear LCD monitor. Improved monitor interface!



Internal memory: 400 MB
(Approximately 148-day continuous 12-channel measurement data storage at a 1-second data storage interval)
Data can be stored in external storage media, such as a CF card and USB

- Setup is fast and so easy that no manual is required.
- Removable input terminals make wiring easier.

Wide Range of Input Types

Accepts thermocouple (up to 18 types), RTD (up to 12 types), DC voltage (within ±50 V), and contact inputs.

- Insulated between channels, 1000 VAC withstand voltage!
- The Text Save mode enables text data to be transferred directly to general-purpose software.
- New aluminum body reduced the weight by approximately 20% (MV2000).
- A wealth of network functionality such as E-mail, FTP, and DHCP functions are available.







Quick Setup mode

We have put all the essential measuring options in one place. Setup is so simple and easy that there is no need for a manual.



USB equipped

Comes standard-equipped with two USB ports. You can download setup files from your PC and save measured data with the touch of a button.



Removable input terminals

Input terminals can be removed in units of 2 channels, making wiring much easier. And block terminals can be purchased separately.

 


Acquire the data you need with a variety of measuring modes

The MV1000 and MV2000 are loaded with a variety of measurement features. By matching these features to your measurement goals, you are sure to be able to collect the data you need.


Free mode

Data acquisition is user prompted, and acquisition of the data sequence occurs at the set sampling rate.



Trigger modes

 You can use a variety of triggers—such as alarm, external contact, time, and calculated data—to set the timing of data acquisition. By combining these with pre-trigger functions and other features, you can efficiently acquire the data you need.






You can now record even more channels over even longer durations!



Multi-channel input


The MV1000 can support up to 24 channels (2 times as many channels as before), while the MV2000 can support up to 48 (1.6 times as many channels as before)! Naturally, every channel is isolated, and you can count on reliable data acquisition!

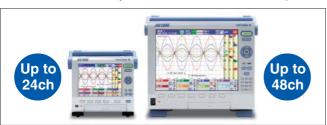

High-capacity memory


Equipped with 400 MB (330 times more memory than before) of internal flash memory! By backing up with external media (CF card), you can further ensure the safety of your data!

 If a power outage should occur, then the unit will automatically resume measurement when power returns.




High-speed sampling

By measuring in high-speed mode, you can attain a minimum measurement interval of 25 ms for every channel (MV1004, MV1008, and MV2008). With a measurement interval that is 5 times faster than before, you can acquire more detailed data.

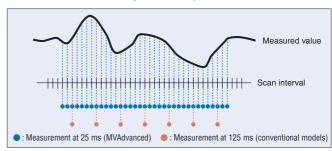

External input gives you up to 348 channels

By connecting to the DAQMASTER Series MW100, you can increase channel input by a maximum of 300 channels. Connection is as easy as the touch of a button!

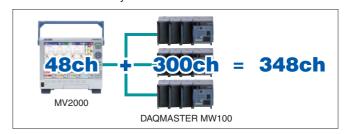




Incredibly clear wide-angle LCD monitor

With a wider viewing angle and a well-defined, vivid display, we have dramatically improved the viewing experience.

 We have also included brightness adjustment and screen saving features.



Full of display features you can use

Pause function

High-speed scroll

Fine grid function

Top display function


Relative time display

Auto zone display

Integral bar graph display


For example, when connecting to a flow meter or a power monitor, you can use bar graphs to check integrated values!



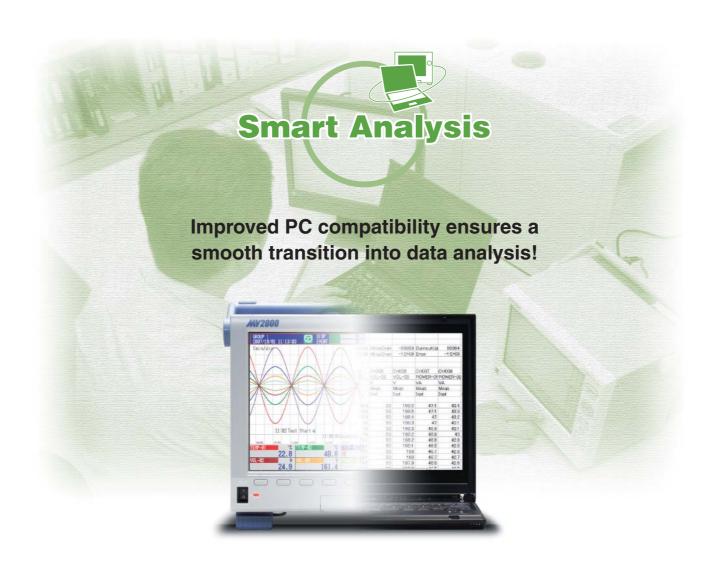

Text save mode

Data measured using the MV1000/MV2000 can be saved in text format to a CF card or to USB memory. This enables you to view data directly without using dedicated software. If you are concerned with security, the option to save data in binary format is also available.

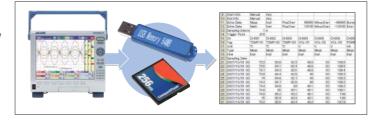

Application software [DAQSTANDARD DXA120]

This is the software package that comes standard with the MVAdvanced. You can use your PC to analyze data saved on the MVAdvanced. You can also arrange settings on your PC and download them to the unit.





■ Package software [DAQWORX]

DAQWORX is a software package that enables you to integrate the Yokogawa recorders, data loggers, and controllers in your data acquisition system. DAQWORX enables you to build a system that can handle anything from small scale networks to distributed multichannel data acquisition.





DAQLOGGER

A data logging software program that enables you to use the Ethernet and serial

communication simultaneously. You can combine up to 32 machines, such as the MVAdvanced, DXAdvanced, DARWIN, and μR recorder for a total of 1600 channels of data acquisition.






DAQEXPLORER

This is a software package that, on top of the features of the DAQSTANDARD package, also

has both file transfer and PC monitoring functions. You can easily make full use of the MVAdvanced's wide range of networking features.


Hardware to ensure reliability

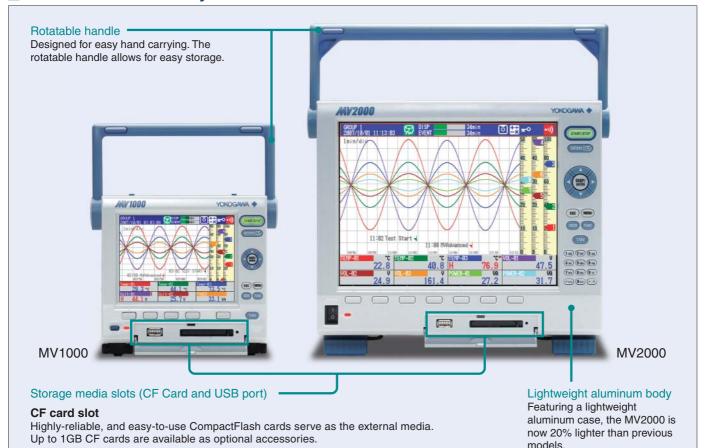

Isolated channel inputs

DC voltage and thermocouple inputs in all MVAdvanced models are channel-isolated. (Channel isolation for RTD inputs is optional on some models.) The high common mode noise characteristic enabled by isolated channel inputs ensures stable measurements in a wide range of applications.

data transfer to a PC is simpler than ever.

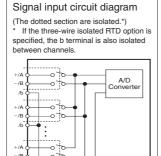

Using the USB interface, you can save data to USB memory. With easy-to-use USB memory,

Compliance with safety standards and EMC standards

Another indication of the reliability of MVAdvanced is their compliance with the stringent specifications for international safety and electromagnetic compatibility (EMC) standards. Of course, MVAdvanced have also been approved for the CE standards.



Yokogawa EMC laboratory CSA: CSA22.2 No61010-1, installation category

II, pollution degree 2 UL: UL61010-1 (CSA NRTL/C)

CE: EMC directive: EN61326 compliance (Emission: Class A, Immunity: Annex A)

EN61000-3-2 compliant EN61000-3-3 compliant

EN55011 compliant, Class A Group 1 Low voltage directive: EN61010-1 compliant, measurement category II, pollution

degree 2

C-Tick: AS/NZS CISPR11 compliant, Class A Group 1

High-breakdown-voltage solid-state relays

MVAdvanced uses high-breakdown-voltage solid-state relays developed by Yokogawa as scanners for switching input signals.

These relays consist of MOSFETs capable of withstanding high voltage (1500 V DC) with low leakage current (3 nA), and power-output photocouplers. They provide highspeed scanning (125 ms/48 channels in the MV2048) while increasing scanner life and eliminating noise.






Comprehensive network functions

We have made the network functions more comprehensive. In addition to e-mail, Web server, and FTP functions, this model comes with time synchronization (SNTP), and automatic network configuration (DHCP). We have equipped this model with all of the latest network technology.

E-mail transmission functions

The MVAdvanced can send alarm information, periodic instantaneous values, report data, and other information via email. The MVAdvanced also features a POP Before SMTP function for transmission authentication.

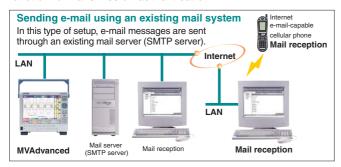

Easy monitoring via Web browser

The MVAdvanced has Web server features that make it easy to use a Web browser, such as Internet Explorer, to monitor the device and retrieve files stored in internal memory.




■ Time synchronization (SNTP) function

By using the SNTP client function, you can synchronize the time on the MVAdvanced to an SNTP server. You can also set up the MVAdvanced for use as an SNTP server.

File transfer using FTP

With the MVAdvanced's FTP server/client features, it is easy to use a fileserver for data sharing and centralized data management.

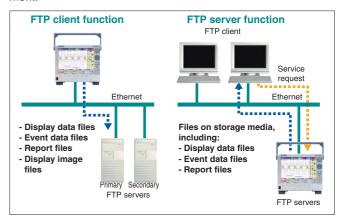


Automatic network configuration (DHCP)

The DHCP function makes it possible to set the IP Address and other network settings of the MVAdvanced automatically, thus making it easier to use the MVAdvanced on a network.

Modbus/TCP function Modbus/RTU function

You can connect the MVAdvanced to other devices and load/ save data using the Modbus protocol.

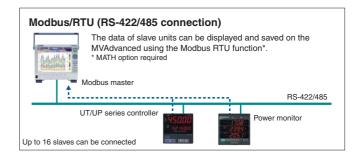

■ A rich variety of options and accessories

The MVAdvanced features a rich variety of options and accessories. Get the most out of the MVAdvanced by combining these options and accessories to suit your needs.

Rechargeable battery model (MV1000 only)

The rechargeable battery model is equipped with a battery that lasts for up to about 13 hours (3x times the duration of previous models). This enables you to



acquire data in places where there is no power supply. (Note: The maximum period of continuous use will vary according to operating conditions.)

Calculation functions

In addition to basic arithmetic, it is possible to calculate the highest value within a set time period, the lowest value, the average value, and the integrated value.

The results of these calculations can be produced in hourly, daily, or monthly reports.

Block terminals (for use with clamp terminals)

These are removable terminals that are useful when connecting and disconnecting any kind of sensor. Extremely convenient for users who change sensors free



change sensors frequently.

Vertical stand (MV1000 only)

A stand for installing the MVAdvanced vertically. Convenient when you place the MVAdvanced on the floor or other low-level places.



Carrying case (MV1000/MV2000)

A soft carrying case for the MVAdvanced. Useful for business trips and any other time you change locations.



Rack mounting bracket (MV1000/MV2000)

Bracket provided for installation on the 19-inch rack (JIS or ANSI).

Standard specifications

Weight and dimensions

MV1000 external dimensions:

MV1000 weight: MV2000 external dimensions: MV2000 weight:

189 (W) × 177 (H) × 259 (D) Approx. 3.5 kg (MV1024) 307 (W) × 273 (H) × 260 (D) Approx. 5.6 kg (MV2048)

Input components

Number of inputs

MV1000: 4, 6, 8, 12, or 24 channels MV2000: 8, 10, 20, 30, 40 or 48 channels

MV1004, MV1008, MV2008: 125 ms, 250 ms, or 25 Measurement intervals:

ms in High-Speed mode MV1006, MV1012, MV1024, MV2010, MV2020, MV2030, MV2040, MV2048: 1 s (100 ms not possible for A/D integration time), 2 s, 5 s,or 125 ms in High-Speed mode A/D integration time is fixed at 1.67 ms in High-

Speed mode

Points to consider when using High-Speed mode:

When using High-Speed mode (an A/D integration time of 1.67 ms) with the MVAdvanced, power supply noise and other factors may cause the measured

values to fluctuate.

If this is the case, then measure using Normal mode (an A/D integration time of 16.7 ms, 20 ms, or 100 ms). DCV (DC voltage: 20, 60, 200 mV, 2, 6, 20, 50 V, 1-5 V)

TC (thermocouple type: R, S, B, K, E, J, T, N, W, L,

RTD (resistance temperature detector: Pt100, JPt100)

DI (at the contact input or the TTL level) DCA (DC current; with external shunt resistor)

Measuring range, measurement accuracy, and display resolution by typical input type

Input	Range	Measurement accuracy (when the integration time is 16.7 ms or more)	Display resolution
DCV	1-5 V	±(0.05% of rdg+3 digits)	1 mV
Thermocouple*	K	±(0.15% of rdg+0.7°C)	0.1°C
Resistance thermometer detector	Pt100	±(0.15% of rdg+0.3°C)	0.1°C

^{*} Does not include the accuracy of reference junction compensation

Display

Input types:

MV1000: 5.5-inch TFT color LCD (320 imes 240 dots) Display device:

MV2000: 10.4-inch TFT color LCD (640 imes 480 dots) Note: The LCD may contain some pixels that are always lighted or that never light, and variations in brightness may occur due to the characteristics of liquid crystals. Please note that these are not defects.

Display groups:

Number of display groups: MV1000: 10 groups, MV2000: 36 groups

Maximum number of channels assignable per group:

MV1000: 6 channels, MV2000: 10 channels Trend/bar graph display: 24 available colors

Displayed colors: Background: White or black

Trend display: Display types: Vertical, horizontal, horizontal wide,

separated horizontal. Direction: Vertical or horizontal

Bar graph display: Digital display: Update rate: 1 s

Overview display: Channel number: Displays a list of all measurement

and MATH channels along with their alarm states. Information display: Alarm Summary display, Message Summary display, Memory Summary display, Report display, Relay Condition display, Modbus Condition

display

Log display content: Log-in log, Error log, Transmission log, FTP log, Web log, E-mail log, SNTP log, Log display:

DHCP log, Modbus log

Max. displayable characters: 16 Displayable characters: Alphanumeric characters

Max. displayable characters: 32 Message display:

Displayable characters: Alphanumeric characters

Historical display function: Allows for the display of data stored to internal or external memory.

You can to dim or turn OFF the LCD backlight if LCD screen saver function: there are no keystrokes for a set time (1, 2, 5, 10, 30

min, or 1 hour).

Display screen registration function:

You can assign a name to a display screen and

Max. registered screens: 8

Memory functions

Tag display:

External media: Media: Compact Flash (CF) card Internal memory: Media: Flash memory Memory size: 400 MB

Examples of internal memory sample times (with the Sample time:

MV1012 recording only event data files for 12 measuring channels and no calculation channels)

Save interval	125 ms	1 s	5 s	10 s	60 s	120 s
Sample time	Approx.	Approx.	Approx.	Approx.	Approx.	Approx.
(400 MB)	18 days	148 days	2 years	4 years	24 years	48 years

Max. savable data files: 400 (savable display data files and event data files

combined)
Saves data files to the internal memory manually. Manual save:

You can save all data or only selected data. Destination drive: CF card or USB memory

Save displayed data: Saves data to the CF card at a Auto save:

set interval

Save event data: Saves data to the CF card at a set interval (in Free Trigger mode) Save when finished

sampling (when setting the trigger) When saving to external media, both event data and Data formats:

display data can be saved in either binary or text format (data is always stored to internal memory in bi-

nary format).

Display data: Varies according to the waveform up-Sampling interval:

Event data: User-set

Manual sample data: You can choose when to save measurement/ MATH channel data files to the internal memory

or to a CF card.

Report data (only available if the unit is equipped with the calculation option):

Saves calculation results as data files to a CF card at

the set times.

Hourly, daily, hourly + daily, daily + weekly, daily +

monthly

Data can be saved using Free mode or Trigger mode. Trigger function:

When using Trigger mode, the user must set the data

length, pre-trigger, and trigger source.

Saves the displayed screen image data to a CF card. Data files saved to a CF card or to USB memory (if Snapshot function: Data file loading

equipped with the USB option) can be loaded and

displayed.

Loading and saving setup data: Settings data can be saved

and loaded in Binary format. USB specification 1.1 host

USB interface: 2 (front and back)

Keyboards: 104 keyboards (US) compliant with USB Connectable devices:

HID Class Version 1.1 109 keyboards (Japanese)

External media: USB memory (not all types of USB

memory are guaranteed to work)

Alarm functions

Alarms settable per channel:

Alarm types:

High/low limit, delay high/low limit, difference high/low limit, high/low limit on rate of change

Delay alarm time: Can be set according to channel (cannot be set

according to level)
Range: 1 to 3600 seconds

Time intervals for the rate-of-change alarm:

A factor of 1 to 32 times the measurement interval

(applies to all channels) When an alarm occurs, the state (the alarm type) or

Display: common alarm state appears on the digital display

Event action function

Description A set action occurs in response to a set event.

Security functions

Key Lock

Description You can customize key lock and login security functions for any transmission or keyboard command.

Sets a password-protected key lock on all command

keys and FUNC screen operations.

Limits access to the MVAdvanced with a login that Login: prompts for username and password.

Security levels and user numbers: System administrators: 5 General users: 30

Clock functions

Clock: Comes with a calendar function (for the western

calendar)

Clock accuracy: ±10 ppm (does not include the less than one second

delay that occurs when turning the power on)

Communication functions (Ethernet)

Electrical specifications IEEE 802.3 compliant (DIX frame)

Transmission media: Ethernet (10BASE-T)

TCP, UDP, IP, ICMP, ARP, DHCP, HTTP, FTP, SMTP, SNTP, Modbus, and MV dedicated protocol Protocols implemented:

E-mail transmission functions (E-mail client):

Automatically sends an e-mail in response to alarms

and other events



listed below

Max. calculation channels:

Max. equation length:

Calculation types:

Report function:

External input (/N3)

Remote control (/R1)

Output voltage:

Rated output current:

MV1004, MV1008: 12 channels

P-P value for time series data)

Conditional statement: [a?b:c] Max. settable constants: 60 (K01 to K60)

weekly, daily + monthly

instantaneous value

to the standard inputs.

Wre26, TypeN(AWG14)

J263*B. Cu53, Cu100

8 inputs can be set).

4 to 20 mADC

• 3-wire isolated RTD input (/N2) All RTD (resistance thermometer detector) terminals

● Cu10/Cu25 RTD input/3-wire isolated RTD input (/N1)

■ 24 VDC transmitter power supply (/TPS2*, /TPS4*

MV2008: 12 channels

120 characters

CARRY(a):b

MV1006, MV1012, MV1024: 24 channels

MV2010, MV2020, MV2030, MV2040, MV2048: 60

General calculations: Basic arithmetic, square root,

exponent, power, relational operations (<, \le , >, \ge , =

≠), logical operations (AND, OR, NOT, XOR)

Statistical calculations: TLOG (maximum value,

absolute value, common logarithm, natural logarithm,

minimum value, average value, integrated value, and

CLOG (maximum value, minimum value, average value, integrated value, and P-P value for a set channel) Special calculations: PRE, HOLD(a):b, RESET(a):b,

Report types: Hourly, daily, hourly + daily, daily +

Calculation types: Reports can be calculated using a

maximum value, minimum value, integrated value, and

Enables the use of Cu10 and Cu25 inputs in addition

(A, B, and b) are isolated. Note: Only available with the MV1006, MV1012,

MV2010, MV2020, MV2030, MV2040, and MV2048 Enables the use of the following thermocouples and

RTDs in addition to the standard inputs.
TC: Kp vs Au7Fe, PLATINEL, PR40-20, NiNiMo, W/

RTD: Pt25, Pt50, Ni100(SAMA), Ni100(DIN), Ni120,

The MV can be controlled through contact input (up to

25 mADC (overcurrent protection level: approximately

combination of up to four of the following: Average

Automatically sends data files to an FTP server FTP client functions:

> Transmittable files: Display data files, event data files, report data files, screen snapshot data files

FTP server functions: Can transfer and delete files, manipulate directories, and produce file lists remotely from a network computer.

Displays MV screen images on a Web browser. Web server function: SNTP client function: Queries a specified SNTP server for the time and

synchronizes with it.

Time query methods: Set interval, start of memory

sample, manual

SNTP server function: Transmits the MV time settings via SNTP protocol. **DHCP** client function: Automatically retrieves the network address settings

from a DHCP server.

Information retrieved automatically: IP address, subnet mask, default gateway, DNS

information

Loads data from other devices using Modbus protocol.* Modbus client function:

The calculation option (/M1) or the external input channel option (/MC1) is required to load data

Modbus server function: Data can be read from the MV using the Modbus protocol.

Batch function

Description Allows for data display, data management, text field

functions, and batch comment input using batches

Power supply

Rated supply voltage: 100 to 264 VAC (auto switching) AC power supply:

Rated supply voltage: 12 VDC/24 VDC DC power supply AC power supply: Operating supply voltage range:

90 to 132, 180 to 264 VAC

Operating supply voltage range: 10.0 to 28.8 VDC DC power supply:

Power consumption MV1000 power consumption

Supply voltage	tage With LCD screen saver on Normal use		Maximum
100 VAC	15 VA	30 VA	45 VA
240 VAC	25 VA	40 VA	60 VA
12 VDC	7 VA	14 VA	24 VA

MV2000 power consumption

Supply voltage	With LCD screen saver on	Normal use	Maximum
100 VAC	28 VA	40 VA	65 VA
240 VAC	38 VA	54 VA	90 VA
12 VDC	9 VA	18 VA	35 VA

Rechargeable battery drive (MV1000 only)

Powered by a dedicated AC adapter or the dedicated Ni-

MH battery pack

The dedicated Ni-MH battery pack can only be charged

when connected to the main unit.

If both the AC adapter and battery pack are connected,

the AC adapter will be used.

Continuous operation time

13 hours maximum (room temperature) under the following conditions: No USB connection; no option

terminals; LCD backlight saver: OFF; transition time:

1 minute; external media saving: Auto-save. Continuous operation time differs according to various

conditions

Normal operating conditions

Supply voltage

AC power supply: 90 to 132, 180 to 250 VAC

DC power supply: 10.0 to 28.8 VDC 50 Hz±2%, 60 Hz±2%

Supply frequency:

Ambient temperature: 0 to 40°C

Ambient humidity: 20 to 80% RH (at 5 to 40°C)

Optional specifications

Alarm output relays (/A1, /A2, /A3, /A4)

Activates the relay output on the rear panel when an

alarm occurs

Choose from 2, 4, 6, or 12* Output points:

Only with the MV2000

Not installable on the MV1008 or MV1024 Serial communication (/C2, /C3)

Media:

EIA RS-232 (/C2) and RS-422/485 (four-wire) (/C3)

The dedicated protocol and the Modbus (master/ Protocols implemented: slave) protocol

Settings/measurement server functions:

Using the dedicated protocol, the following functions

are available

Settings and commands equivalent to the unit's key

commands Data output

Modbus master/slave functions: Loads data from other devices using Modbus protocol.* The calculation option (/M1) or the external input channel option (/MC1) is required to load data.

Fail/status output relav (/F1)

Activates a relay output upon the detection of a CPU

abnormality on the MV or a set condition. Performs calculations as well as displays and records

 Calculation functions (/M1) the trends or numeric values of calculation channel

Maximum output current: 68 mADC) * /TPS2 is only available for the MV1000, /TPS4 is only available for the MV 2000

Pulse input (/PM1) Contact and open-collector pulse input is possible

through the use of special remote input terminals. The calculation functions (/M1) and remote control (R1) options are included in the pulse input option.

22.8 to 25.2 VDC (for rated current load)

Number of Inputs: 3 channels (however, if the remote control input terminals are used for pulse input, then up to 8 channels can be made available)

Input methods: Photocoupler isolation (no isolation between channels)

Internal isolated power supply (approx. 5 V)

Input types: Dry contact, open collector (TTL or transistor)
Ten-segment linearizer approximation can be used on Input value correction (/CC1)

every measurement channel to correct input values.

Settable broken-line points: 2 to 16

Channel expansion (/MC1, only available on the MV2000)


You can use the Modbus master function to load data from other devices, and set data through the use of communication input commands. Additional channels

are provided for communication input. Note 1: Only available with the MV2010, MV2020,

MV2030, MV2040, and MV2048

Note 2: When equipped with the external input channel option, the High-Speed mode measurement interval is unavailable.

 Number of external input channels: 240 channels (channel numbers 201 to 440)





MODEL AND SUFFIX CODES

MV1000

Model code	Suffix code	Optional code	Description	
MV1004			4 ch, 125 ms (Fast sampling mode: 25 ms)	
MV1006	006		6 ch, 1 s (Fast sampling mode: 125 ms)	
MV1008 *9	VIV1008 *9		8 ch, 125 ms (Fast sampling mode: 25 ms)	
MV1012	012		12 ch, 1 s (Fast sampling mode: 125 ms)	
MV1024 *9			24 ch, 1 s (Fast sampling mode: 125 ms)	
Internal Memory	-3		400 MB	
External Media	-4		CF card (with Media) + USB	
Language	-2		English/German/French	
	-4		Korean	
Input Terminal	-1		Clamped terminal	
	-2		Screw terminal (M4)	
Power Supply	-1		100 VAC,240 VAC	
	-2		12 VDC *1	
	-3		Rechargeable battery *1	
Power Cord	D		Power cord UL/CSA Standard	
	F		Power cord VDE Standard	
	R		Power cord SAA Standard	
	Q		Power cord BS/PSB Standard *11	
	Н		Power cord GB Standard	
	Р		Power cord EK Standard *10	
	W		without AC adapter, Power cord *2	
Options		/A1	Alarm output 2 points *3 *9	
		/A2	Alarm output 4 points *3 *9	
		/A3	Alarm output 6 points *3 *4 *9	
		/C2	RS-232 interface *5	
		/C3	RS-422/485interface *5	
		/F1	FAIL/Status output *4 *9	
		/M1	Mathematical functions	
		/N1	Cu10, Cu25 RTD input/3 leg isolated RTD	
		/N2	3 leg isolated RTD *6	
		/N3	Extended input type (PR40-20, Pt50, etc.)	
		/R1	Remote control *9	
		/TPS2	24 VDC transmitter power supply (2 loops) *7 *9	
		/PM1	Pulse input (including remote control and mathematical functions) *8 *9	
		/CC1	Calibration correction function	

- 14 An AC adapter is included as a standard accessory. 2 W can be specified for only 12 VDC

 3 /A1, /A2 and /A3 cannot be specified together. 4 /A3 and /F1 cannot be specified together. 5 /G2 and /G3 cannot be specified together. 6 /N2 can be specified to only MV1006, MV1012 and MV1024.

 7 In case that /FPS1 is specified, /A2, /A3, /F1 and /FM1 cannot be specified together.

 8 In case that /FM1 is specified, /A2, /A3, /M1, /R1 and /TPS2 cannot be specified together. And combination of /A2/F1 cannot be specified together.

 9 In case that MV1008, MV1024 is specified, /A1, /A2, /A3, /F1, /R1, /TPS2 and /PM1 cannot be specified.

 10 In case that 100 VAC, 240 VAC is specified, P cannot be specified together.

 11 BS standard is specified only 100 VAC,240 VAC

STANDARD ACCESSORIES

Product	Qty,
DAQSTANDARD	1
Terminal Screw	5
Instruction manual (First step guide: by paper)	1
Instruction manual (Mainunit/commuication/DAQSTANDARD: CD-ROM)	1
128 MB CF CARD	1
Power cord	1 11
AC adapter + Power cord	1 *2

- "1 100 VAC/240 VAC Power supply (When the "-1" Power supply specification code is specified)
 "2 12 VDC Power supply (When specified the "-2" Power supply specification code) or Rechargeable battery (When specified the "-3" Power supply specification code)

ACCESSORIES

Product	Code (Parts NO.)	Specification
Shunt resistor	415920	250Ω±0.1%
(For screw input terminal)	415921	100Ω±0.1%
	415922	10Ω±0.1%
Shunt resistor	438920	250Ω±0.1%
(For clamped input terminal)	438921	100Ω±0.1%
	438922	10Ω±0.1%
CF card adapter (not including CFcard)	772090	
CF CARD (not including adapter)	772093	512 MB
	772094	1 GB
Soft carrying case	790501	For MV1000
	701964	For MV2000
Rack mount bracket (JIS)	B8805JU	For MV1000
Rack mount bracket (ANSI)	B8805JT	For MV1000
Rack mount bracket (JIS)	B8806JU	For MV2000
Rack mount bracket (ANSI)	B8806JT	For MV2000
Vertical stand	B8805JL	For MV1000
Battery Pack	B8805HA	Using for Battery mode
Removable clamped input terminal	A1923JT	for 2 channels

APPLICATION SOFTWARE

Model code	Description	OS
DXA120	DAQSTANDARD	Windows2000, XP, Vista

MV2000

Model code	Suffix cod	de Optional code	Description	
MV2008	/2008		8 ch, 125 ms (Fast sampling mode: 25 ms)	
MV2010			10 ch, 1 s (Fast sampling mode: 125 ms)	
MV2020			20 ch, 1 s (Fast sampling mode: 125 ms)	
MV2030			30 ch, 1 s (Fast sampling mode: 125 ms)	
			40 ch, 1 s (Fast sampling mode: 125 ms)	
MV2048			48 ch, 1 s (Fast sampling mode: 125 ms)	
Internal memory	-3		400 MB	
External Media	-4		CF card (with Media)+USB	
Display Language	-2		English/German/French	
	-4		Korean	
Input Terminal	-1		Clamped terminal	
•	-2		Screw terminal (M4)	
Power Supply	-1		100 VAC, 240 VAC	
,	-2		12 VDC *1	
Power Cord		D	Power cord UL/CSA Standard	
		F	Power cord VDE Standard	
		R	Power cord SAA Standard	
		a	Power cord BS/PSB Standard *11	
		Н	Power cord GB Standard	
		Р	Power cord EK Standard *10	
		w	without AC adapter, Power cord *2	
Options		/A1	Alarm output 2 points *3	
•		/A2	Alarm output 4 points *3	
		/A3	Alarm output 6 points *3	
		/A4	Alarm output 12 points *3*4	
		/C2	RS-232 interface *5	
		/C3	RS-422/485interface *5	
		/F1	FAIL/Status output *4	
		/M1	Mathematical function	
		/N1	Cu10,Cu25 RTD input /3 leg isolated RTD	
		/N2	3 leg isolated RTD *6	
		/N3	Extended input type (PR40-20, Pt50, etc.)	
		/R1	Remote control	
		/TPS4	24 VDC transmitter power supply (4 loops) *7	
		/PM1	Pulse input (including remote control and mathematical functions) *8	
		/CC1	Calibration correction function	
		/MC1	External input function *9	


- *1 An AC adapter is included as a standard accessory.
 *2 W can be specified for only 12 VDC
 *3 /A1, /A2, /A3 and /A4 cannot be specified together.
 *4 /A4 and /F1 cannot be specified together.
 *6 /N2 can be specified for only MV2010, MV2020, MV2030, MV2040 and MV2048.
- *7 In case that /TPS4 is specified, /A4 cannot be specified together. And combination of /A3/F1 cannot be specified together. *8 In case that /PM1 is specified, /A4, /M1, /R1 cannot be specified together. And combination of /A2/F1 and /A3/TPS4
- cannot be specified together. Calmiot be specified together.

 9 /MC1 can be specified for only MV2010, MV2020, MV2030, MV2040 and MV2048.

 10 In case that 100 VAC, 240 VAC is specified, P cannot be specified together.

 11 BS standard is specified only 100 VAC, 240 VAC

DIMENSIONS

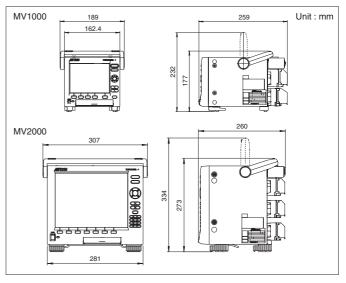

NOTICE

- Before operating the product, read the user's manual thoroughly for proper and safe operation.
- If this product is for use with a system requiring safeguards that directly involve personnel safety, please contact the Yokogawa sales offices.



YOKOGAWA ELECTRIC CORPORATION

Network Solutions Business Div./Phone: (81)-422-52-7179, Fax: (81)-422-52-6619 E-mail: ns@cs.jp.yokogawa.com

YOKOGAWA CORPORATION OF AMERICA YOKOGAWA EUROPE B.V.

YOKOGAWA ENGINEERING ASIA PTE. LTD.

Phone: 800-258-2552, Fax: (1)-770-254-0928 Phone: (31)-88-4641000, Fax: (31)-88-4641111

Phone: (65)-62419933, Fax: (65)-62412606

NetSOL Online Sign up for our free e-mail newsletter www.yokogawa.com/ns/

[Ed: 04/b] Copyright ©2007 Printed in Japan, 001(KP)

Subject to change without notice.